

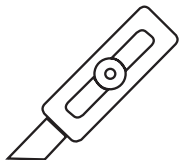
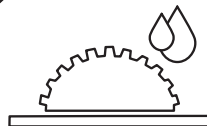


PROPOSED TOOLS FOR INSTALLATION :

- Large utility knife to cut between the stones
- Grout float

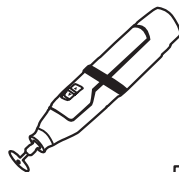

- Russian pliers or
Rotary tool or
Wet tile saw with diamond blade



HOW TO INSTALL SPEEDTILES 3 x 8 STONE MOSAICS:

- 1 Please ensure that the wall where you are installing the SpeedTiles is CLEAN, SMOOTH and NON-POROUS.
- 2 **STICKING TIP: Use a 500 ml to 750 ml bottle filled with water and add 1 to 2 tea spoon(s) of mild dishwashing liquid.**
- 3 Then find the highest countertop point and draw a level line from that point.
This line will serve as a guide to install the first row of tiles.
- 4 Place the tile (pre-cut if needed) with the stone side facing the countertop and remove the Inoxia protection paper.
Spray a SMALL amount of soapy water mix on the adhesive and spread it with your hand over the whole surface.
Adding soapy water will allow you to perfectly adjust the tile on the wall by delaying the bonding time.
- 5 Install the tiles according to the desired layout.
- 6 IF YOU HAVE A 2X FASTER MODEL: Once the tiles are in place, apply the grout of your choice following the manufacturer's instructions.

BEFORE INSTALLING!


Because the tiles are made of natural materials, it is highly recommended to simulate the installation by placing the tiles flat and by ensuring the interlocking of the tiles

IMPORTANT!




If you are using SpeedTiles made of natural stone in a place where they are likely to get dirty, we suggest to protect the surface with an appropriate sealant.

GAMME D'OUTILS À UTILISER :

- Gros couteau utilitaire entre les tuiles
- Taloche à coulis

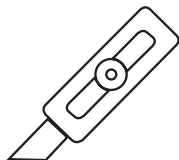

- Pince russe ou
Outils rotatif ou
Scie à eau avec une lame en diamant

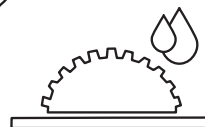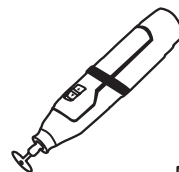

MARCHE À SUIVRE POUR INSTALLER LES SPEEDTILES 3 x 8 EN PIERRE:

- 1 Assurez-vous que le mur où vous installez les tuiles SpeedTiles soit **PROPRE, LISSE** et **NON-POREUX**.
- 2 **ASTUCE DE COLLAGE : Prendre une bouteille entre 500 ml et 750 ml, la remplir d'eau et y ajouter 1 à 2 cuillère(s) à thé de savon à vaisselle doux.**
- 3 Trouver ensuite l'endroit où le comptoir est le plus haut, puis tracer une ligne de niveau à partir de ce point. Cette ligne servira de guide pour installer la première rangée de tuile.
- 4 Déposer la tuile du côté pierre (pré-coupée si nécessaire), face au comptoir et retirer le papier protecteur Inoxia. Vaporiser une PETITE quantité du mélange d'eau savonneuse sur l'adhésif et le répandre avec votre main sur toute la surface. Ajouter l'eau savonneuse vous permettra d'ajuster parfaitement la tuile au mur en retardant l'adhésion.
- 5 Installer les tuiles selon l'agencement désiré.
- 6 SI VOUS AVEZ UN MODÈLE DE LA COLLECTION 2X + RAPIDE: Une fois les mosaïques en place, appliquer le coulis de votre choix tout en suivant les instructions du fabricant.

PRÉALABLE À L'INSTALLATION!

Les tuiles étant faites de matériaux naturels, il est fortement recommandé de simuler l'installation en plaçant les tuiles à plat et en confirmant l'emboîtement de ces dernières.

IMPORTANT!

Si vous utilisez les tuiles SpeedTiles en pierre naturelle à un endroit où elles sont susceptibles de recevoir de la saleté, il est suggéré de protéger la surface avec un scellant approprié.